

SMATHERS & BRANSON

INSTRUCTION MANUAL

SETTING THE TIME (MIYOTA 2415)



1. **A Normal position**
2. **Pull out crown to the C Position and turn crown until the time is set correctly**
3. **Push back to A Position**

01

SETTING THE DATE (MIYOTA 2415)



1. **A Normal position**
2. **Pull out crown to the B Position and turn crown counter-clockwise for Date adjustment**
3. **Push back to A Position**

02

HOW TO CLEAN YOUR WATCH

Cleaning:

To preserve the attractive appearance of the watch, clean the case regularly in slightly soapy water, then rinse in clean water and dry with a soft cloth. For the straps, try using a damp cloth with a small amount of soap to clean.

Soft Toothbrush:

You can also use a toothbrush to clean your watch case. Make sure you choose a brush with soft bristles to avoid scratching the watch case. Do not use a toothbrush on the needlepoint straps.

03

Battery Change:

Your watch uses one SR626W battery. When installing a new battery, it is better to go to a trained jewellers or watch specialists to install new batteries, while being careful to avoid any damage to components of the watch.

1. Open the watch at the back. Carefully remove the caseback, make sure not to lose the waterproof seal.
2. Pick up the battery spring.
3. Take out the battery and insert a new one
4. Push the battery spring down.
5. Before you put the caseback on again, make sure the waterproof seal is correctly in place.

Water Resistance:

This watch is rated to 3ATM / 30M

We do not recommend wearing the watch in water (Shower, swimming pool, ocean, hot tub etc.)

04

PRECAUTIONS AND PREVENTIVE MEASURES

Temperature:

Do not expose your watch to sudden temperature changes (exposure to sunlight followed by immersion in cold water) or extreme temperatures [over 60°C (140°F) or below 0°C (32°F)].

Magnetic Fields:

Do not expose your watch to intense magnetic fields such as loudspeakers, portable telephones, computers or refrigerators and other electromagnetic appliances.

Shocks:

Avoid thermal or other shocks as it may harm your watch. In the event of a violent shock please have your watch checked by an authorized service center.

05

INTERNATIONAL WARRANTY

Your SMATHERS & BRANSON watch is warranted for a period of 12 months from the original date of purchase under the terms of conditions of this warranty.

The warranty covers materials and manufacturing defects. During the warranty period the watch movement, hands and dial are the only components covered under this warranty. A covered component will be repaired or the watch will be replaced free of repair charges, if it proves to be defective. The warranty does not cover normal wear of components, or damaged caused by accident or mishandling, or the loss or theft of your watch. Any modification of your watch by the addition of non-original parts, or the substitution of parts with non-original parts will void this warranty.

06